

# **Miniature Pressure Transducer**

# Model 81530

Code: 81530 EN

Delivery: ex stock

Warranty: 24 months



- Measuring ranges between 0 ... 1 bar and 0 ... 1000 bar
- Diaphragm at front side
- Temperature range up to 200 °C
- Suitable for static and dynamic measurings
- Made of stainless steel
- Reliable and robust

### **Application**

Thanks to its compact size and rugged construction with front end diaphragm, this miniature pressure transducer can be used anywhere. Made of stainless steel and hermetically sealed, it is particularly suitable for use under harsh environmental conditions, for corrosive, viscous, liquid and gaseous media and for measurements on hydraulic systems in both damp and wet atmospheres.

The high resonance frequency of the transducer means that it can be used under the severest conditions e.g. in explosion tests and aerospace applications. It is very easy to install this transducer with no dead volume to distort the measurement result. A weldable coupler is available for these installation situations.

### **Description**

The diaphragm, body and bayonet connector form a single unit in this miniature pressure transducer. The thin diaphragm fabricated from a single piece with clamping ring, and the connector, are welded to the sensor body to provide a hermetic seal. A four-legged film strain gauge bridge is applied to the rear diaphragm face, which is the sensor element of the transducer. Pressures are measured with respect to a sealed atmosphere of approximately 1 bar as reference pressure.

The screw thread of the pressure transducer ends in an Oring groove, sealed by a rubber, plastic or metal Oring according to the pressure range and medium. It is not permitted to have a seal directly against the front diaphragm.

There is an O-ring inside the electrical plug-in connector. If a special watertight connector is used, the transducer can also be deployed in damp and wet environments.



### **Technical Data**

Order Code	Measuring Range	Nominal Sensitivity*	Influence of Temperature to Zero [% F.S./K]	Influence of Temperature to Sensitivity [% Rdg./K]
81530-1	0 1 bar	0.3 mV/V	< ± 0.18	< ± 0.24
81530-2	0 2 bar	0.6 mV/V	< ± 0.10	< ± 0.14
81530-5	0 5 bar	1.5 mV/V	< ± 0.04	< ± 0.05
81530-10	0 10 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-20	0 20 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-50	0 50 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-100	0 100 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-200	0 200 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-500	0 500 bar	1.5 mV/V	< ± 0.02	< ± 0.04
81530-1000	0 1000 bar	1.5 mV/V	< ± 0.02	< ± 0.04

<sup>\*</sup> Deviations from the stated value are possible. Please refer to the calibration protocol for more accurate values.

#### Electrical values

Output resistance: foil strain gauge  $350 \ \Omega, \ nominal \\ Excitation \ voltage: \\ S \ V \ DC \ or \ AC \\ Output \ signal: \\ refer \ to \ table$ 

### Environmental conditions

Limit temperature range:  $-55\,^{\circ}\text{C}$  ...  $200\,^{\circ}\text{C}$  Nominal temperature range:  $15\,^{\circ}\text{C}$  ...  $150\,^{\circ}\text{C}$  Influence of temperature on zero: refer to table Influence of temperature on sensitivity: refer to table

#### Mechanical values

Kind of measurement: absolute pressure measurement (reference 1 bar)

Error of non-linearity and hysteresis: measuring range  $\leq 0 \dots 5$  ba

Overload: 50 % over capacity
Burst pressure: 400 % over capacity

Natural Frequency:

measuring range 0 ... 5 bar approx. 35 kHz measuring range 0 ... 50 bar approx. 100 kHz measuring range 0 ... 500 bar approx. 200 kHz

Dynamic performance:

recommended 70 % of capacity maximum 100 % of capacity

Design: flush mounted, welded diaphragm
Material: stainless steel 17-4 PH (like 1.4542)
Pressure connection: external thread M 12 x 1,75

Mounting torque: max. 5 Nm Wrench size: 19 mm

Electrical connection:

6 pin bayonet plug-in connector Souriau 851 07A 10 - 6P

Wiring code:

Protection class:

Mating connector: model 9945 Souriau 851-06E-C-10-6S or Souriau 851-06E-C-10-6S


usable up to 120 °C, included in scope of delivery


acc. to EN 60529

**IP68** 

Dimensions: see scale drawing Weight: approx. 40 g

### Dimensional drawing model 81530

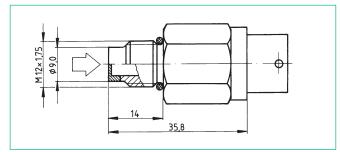

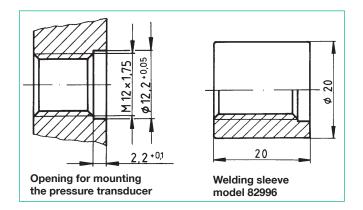

## Accessories

Welding sleeve with O-ring nut, material 17 - 4 PH, length 20 mm **Model 82996** 

Mating connector usable up to 175 °C,

6 pin socket with strain relief Model 9900-V544

Connecting cable usable to 175 °C

for burster desktop devices with 12 pin connector,

length 3 m Model 9990

Connection cable (standard)

for connection to burster desktop devices Model 9911

Connecting cable usable to 175 °C, open, color coded and tinned cable ends,

length 3 m Model 99544-000A-0170030

O-ring 12.8 x 1.8, usable to 200 °C,

1 exemplar is included in scope of delivery Model 81530-Z001

Evaluation electronics, amplifiers and

process control units refer to section 9 of the catalog